


## BENCH SEAT BACK COVER

### REMOVAL

1. Remove the fixed rear seat ([Refer to 23 - Body/Seats/SEAT/Removal and Installation](#)).
2. Remove the second row seat headrests ([Refer to 23 - Body/Seats/HEADREST/Removal and Installation](#)).
3. With the seat on its back, use a trim tool and carefully release the retaining clips and remove the side shields.

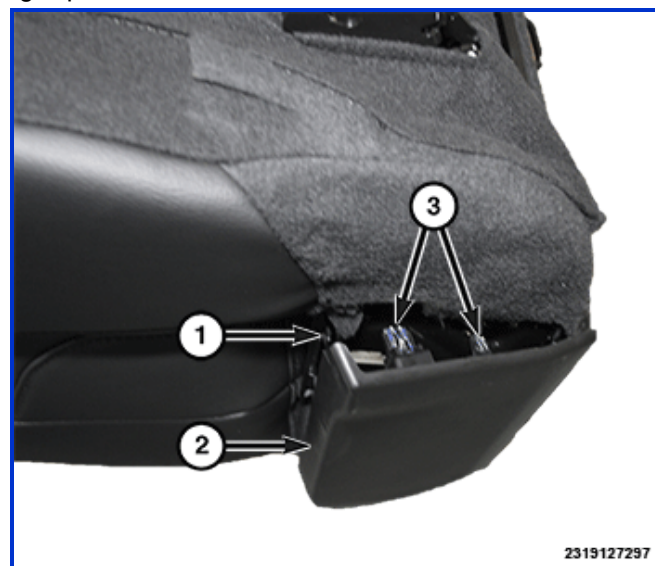


- 1 - Retaining Clip
- 2 - Side Shield
- 3 - Retaining Clip

4. Open the zippers on each side of the seat back cover and release the J-hook strip.




- 1 - J-hook Strip
- 2 - Zipper

5. Push up on the release handle bezels and carefully remove.

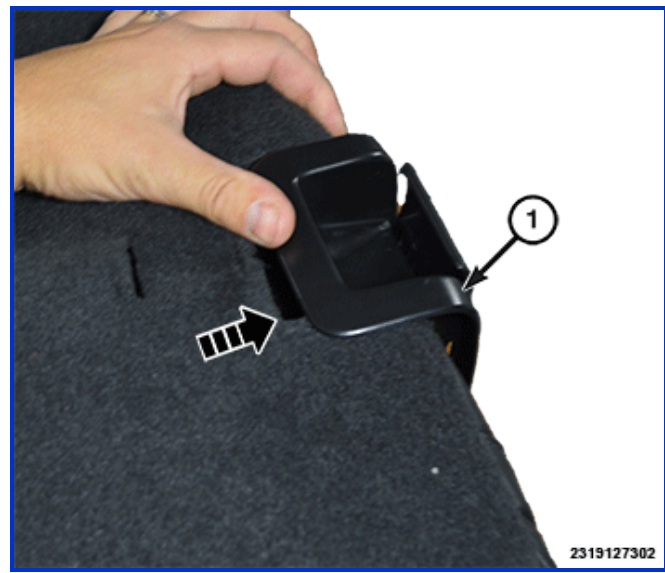

1 - Release Handle Bezel

6. Using a trim stick, carefully release the push fasteners inside the perimeter of the release handle.

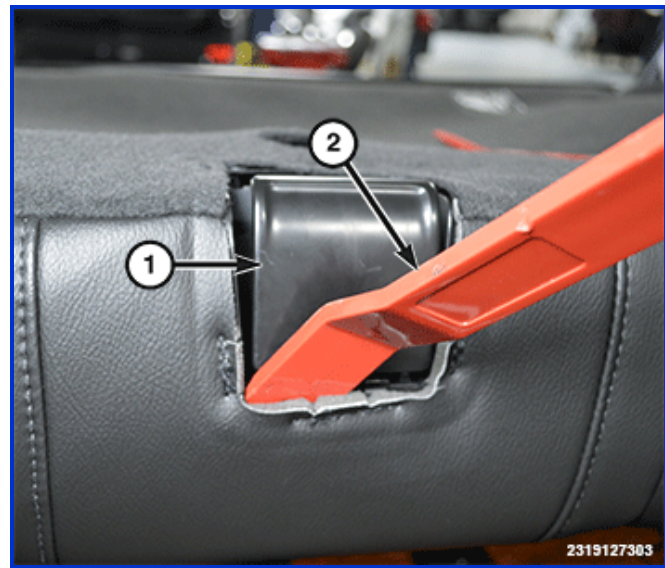

1 - Release Handle  
2 - Trim Stick


7. Using a trim stick, carefully remove both headrest release bezels.



1 - Headrest Release Bezel


8. Lift the seat back cover and release the J-hook fasteners.

9. Remove the seat back foam and seat back cover as an assembly, from the seat back frame.

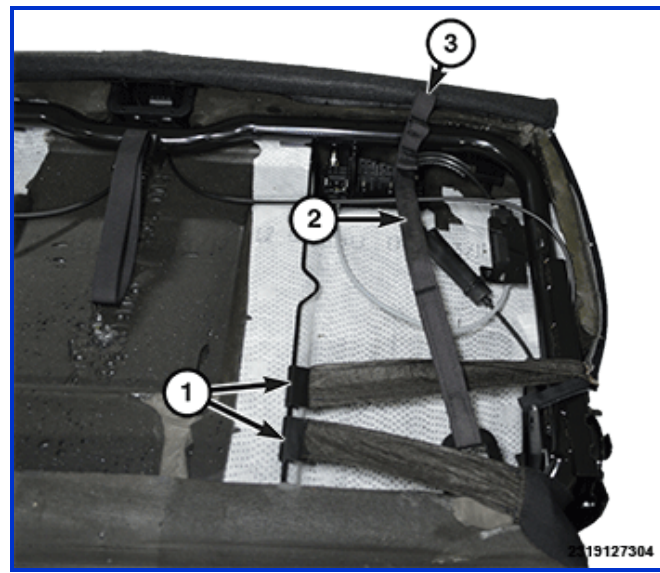

- 1 - J-hook Fasteners
- 2 - Hook and Loop Strip
- 3 - Seat Back Cover

10. Pull the seat back cover away from the seat foam, release the velcro and cut the hog rings.

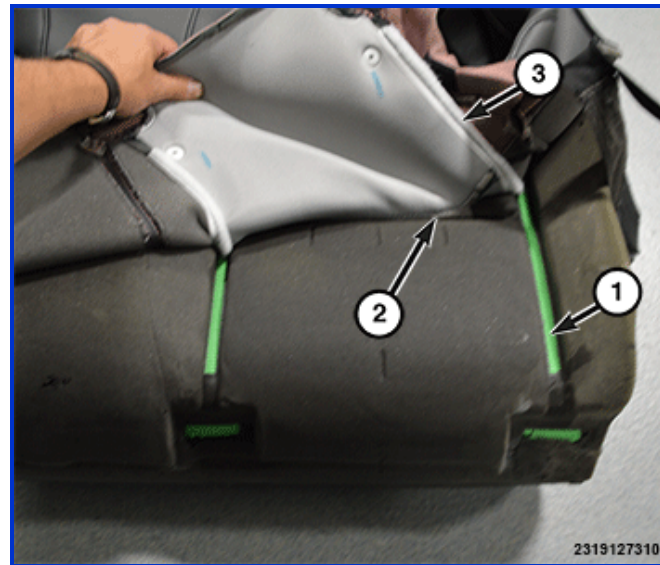

- 1 - Velcro
- 2 - Hog Rings
- 3 - Seat Back Cover

## INSTALLATION

Follow the removal procedure in reverse for general reassembly of the components on the vehicle. The steps listed below are calling out specific procedures that should be followed during installation.

- Position the seat back cover onto the seat back foam and install **NEW** hog rings.