


BENCH SEAT HEADREST MECHANISM

NOTE:

This procedure is for the bench seat configuration only.

REMOVAL

1. Remove the seat back foam and seat back cover as an assembly, from the seat back frame ([Refer to 23 - Body/Seats/COVER, Seat Back/Removal and Installation](#)).
2. Open the cable junction box and release the cable.
3. Remove the bolts then the headrest mechanism.

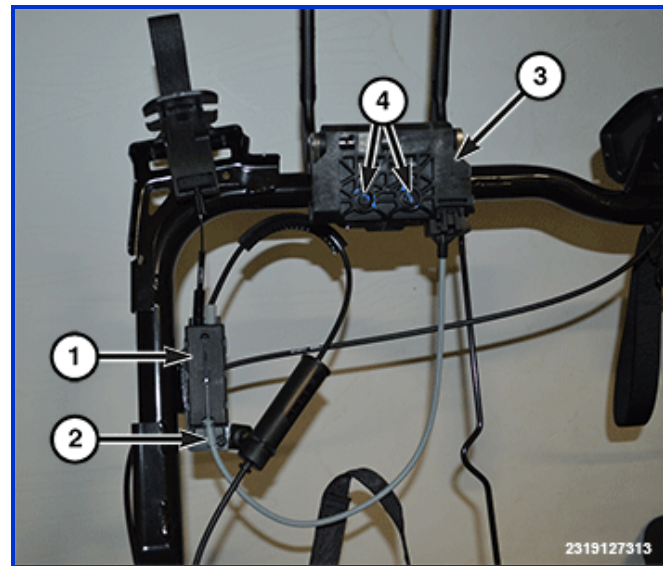

- 1 - Junction Box
- 2 - Cable
- 3 - Headrest Mechanism
- 4 - Bolts

INSTALLATION

Follow the removal procedure in reverse for general reassembly of the components on the vehicle. The steps listed below are calling out specific procedures that should be followed during installation.

- Install the headrest and install the headrest bolts. Tighten the second row bench seat headrest bolts to the proper ([Torque Specifications](#)).
- Verify the function of the release cable.