



- ### Common Driver Types
- Flathead ☆
  - Phillips ☆
  - Allen ☆
  - Torx ☆
  - Spline Drive
  - Robertson

## Engine Information

	2.0 L GME T4 turbo I4	3.6 L Pentastar V6	6.4L Hemi V8
Oil Type	5W - 30	0W - 20	0W - 40
Oil Level	5 qts	5 qts	7.5 qts
Coolant Type	Zerex G05	Mopar HOAT	Mopar HOAT
Coolant Level	9.9 qts	10.5 - 13 qts	15.6 - .9 qts
Oil Filter Type	OEM Mopar	OEM Mopar	OEM Mopar
Drain Plug Torque	20 ftlbs	20 - 25 ftlbs	25 ftlbs

## Other Helpful Info

- Lug Nuts Should Be Torqued to 130ftlbs
- Oil Should Be Changed Around Every 7,500 Miles
- Inspect/Possibly Replace Brake Linings Around Every 20,000 Miles
- Air Filter Should Be Replaced At <30,000 Miles Depending On Driving Conditions
- Transfer Case Fluid Should Be Changed Around Every 30-60,000 Miles
- Spark Plugs For 2.0L Should Be Replaced At 30,000 Miles
- Spark Plugs For 3.6L Should Be Replaced at 100,000 Miles
- Replace Transmission Fluid Around Every 40,000 Miles

## Transmission Information

	8 Speed Auto	6 Speed Manual
Transmission Fluid Type	Mopar 8+9	Mopar ATF +4
Transmission Fluid Level	6 - 9 qts	2.3 qts
Trans Drain/Fill Torque	9 nm	18 - 20 ftlbs

