

HEADREST

NOTE:

This procedure is shown on a 40% split seat configuration, and is similar for all seat configurations.

REMOVAL


1. Open the J-clips at the bottom of the headrest cover.



1 - J-clips

2 - Headrest Cover

2. Slightly remove the cover, remove the clips, then slide the headrest support off the posts.

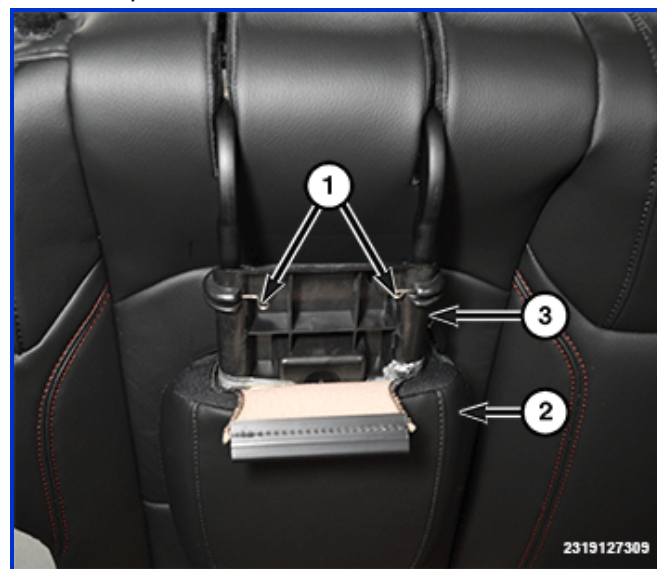


1 - Clips

2 - Cover

3 - Headrest Support

3. For seat options with the one piece J-Channel, position the headrest in the upright position.
4. Disengage the J-Channel and lift the front side of the headrest cover up high enough to access the retaining clip.
5. Remove the retaining clip and remove the headrest from the seat.

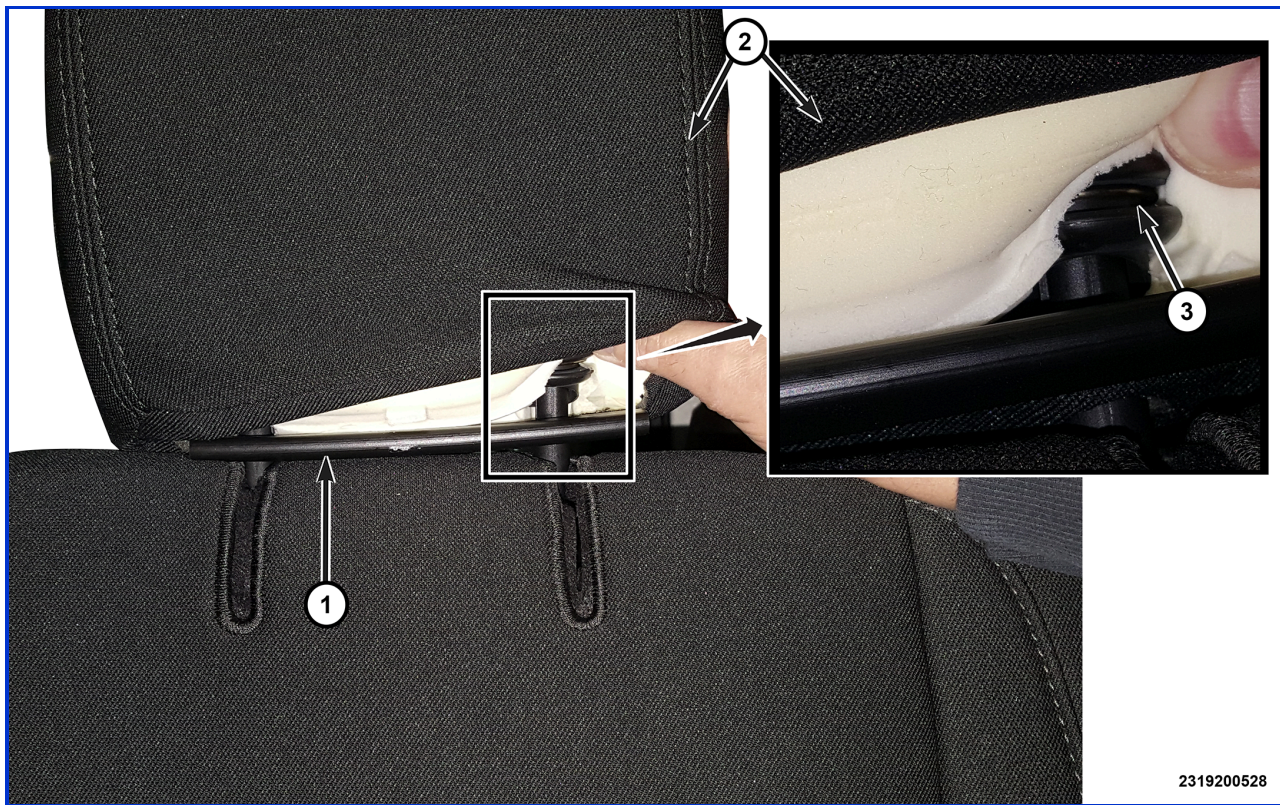

2319200528

- 1 - Headrest Cover
- 2 - Retaining Clip
- 3 - J-Channel

INSTALLATION

Follow the removal procedure in reverse for general reassembly of the components on the vehicle.