




Bead Lock Capable Wheel


www.mopar.com

77072466AB

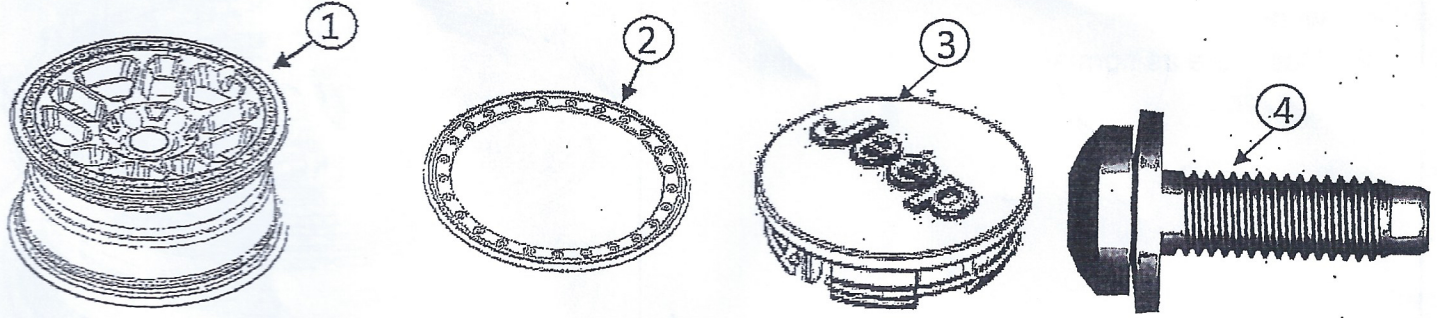

Call Out	Jeep Wrangler	Quantity	Service Part (Y/N)	Part Number
1	Mopar Bead Lock Capable Wheel	1	Y	68361859AB
2	Trim Ring	1	Y	68362086AA
3	Jeep Center Cap	1	Y	1LB77RXFAC
4	Trim Ring Hardware	25	Y	06511068AA

82215593

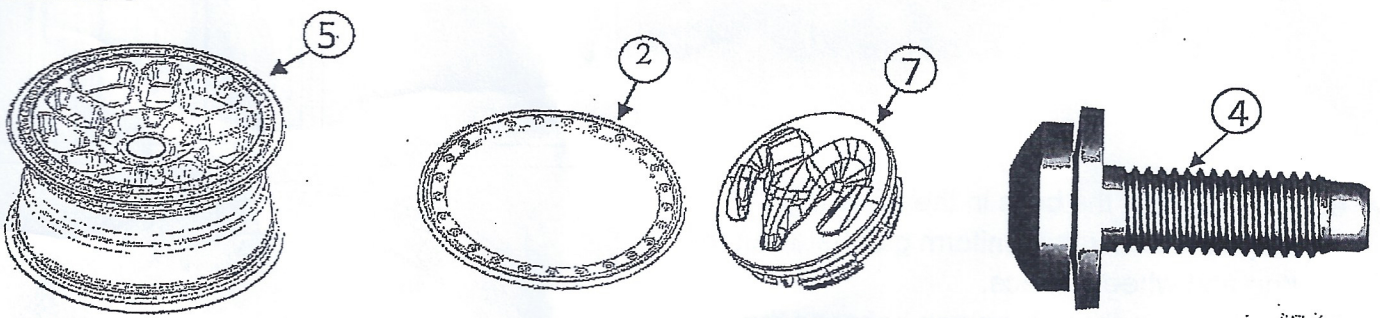

Call Out	Ram 1500	Quantity	Service Part (Y/N)	Part Number
5	Mopar Bead Lock Capable Wheel	1	Y	68361860AA
2	Trim Ring	1	Y	68362086AA
7	Ram Center Cap	1	Y	1LB72RXFAB
4	Trim Ring Hardware	25	Y	06511068AA


READ, UNDERSTAND, AND FOLLOW ALL INSTRUCTIONS CAREFULLY BEFORE INSTALLATION!!!

Note: Optional functional Bead Lock Ring Kit, part number P5160154 sold separately.


Bead Lock Capable Wheel Mounting

ON ROAD USE

1. Remove Trim Ring (2) and fasteners (4) from wheel.
2. Mount tire as normal, using a tire machine.

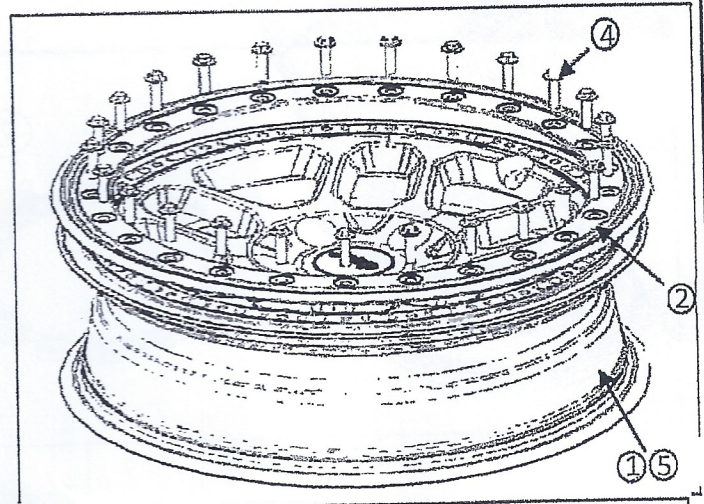

3. Position ring (2) on wheel, aligning bolt holes. Hand thread bolts.

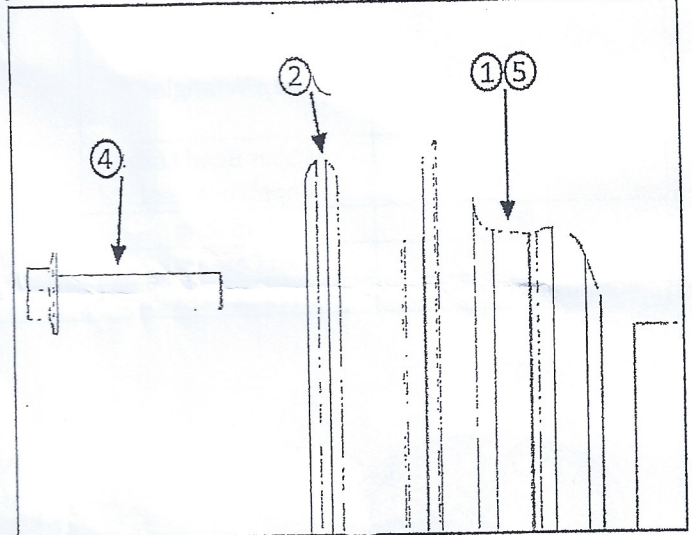

4. Hand-tighten the bolts in the following sequence, ensuring uniform gap between the ring and wheel surface.
5. Making sure there is no gap between the wheel surface and ring, torque bolts to 27 N-m (20 lb.-ft.) in the same sequence.
6. Inflate tire to recommended pressure.
7. Balance wheel/tire/ring assembly.
8. Mount tire/wheel/ring assembly to vehicle.
9. Install Center Cap (3) or (7).
10. Fold and place instruction sheet in the vehicle's glove box.

