

If you do have the Aux switches installed in your Jeep then wire it to Aux 3 or 4... In my case I used the Aux 3 Wire:



I didn't have the Aux switches originally and added them as one of the first mods using the Tazer JL to enable them by using the following fuse tap method:

https://www.amazon.com/gp/product/B0759JVKX6/ref=ppx_yo_dt_b_asin_title_o07_s00?ie=UTF8&psc=1


Dual Circuit Car Auto Truck Micro2 Fuse Adapter Tap



Before having the Aux switches I used a Micro2 Fuse Tap in P58 for passenger heated seats... Depending on your needs there are several fuses that can be tapped but you want one that only comes on with the ignition or accessories and not running of the battery all of the time... For grounding I used a ring terminal similar to above that I crimped and used a heat gun to shrink the insulator for a solid connection and then




In the picture that shows the bluetooth controller (Arrow), the 2 rectangular boxes are for the turns, & the items circled in blue are the connections for the halos on each light (head/fogs)... Basically when you get the app downloaded and set the halo's to your liking just leave them on provided you didn't wire them directly to a constant on 12v source... Then every time you turn on the ignition those should light up... Now in the app you also can turn those off as it has a power switch in the app...

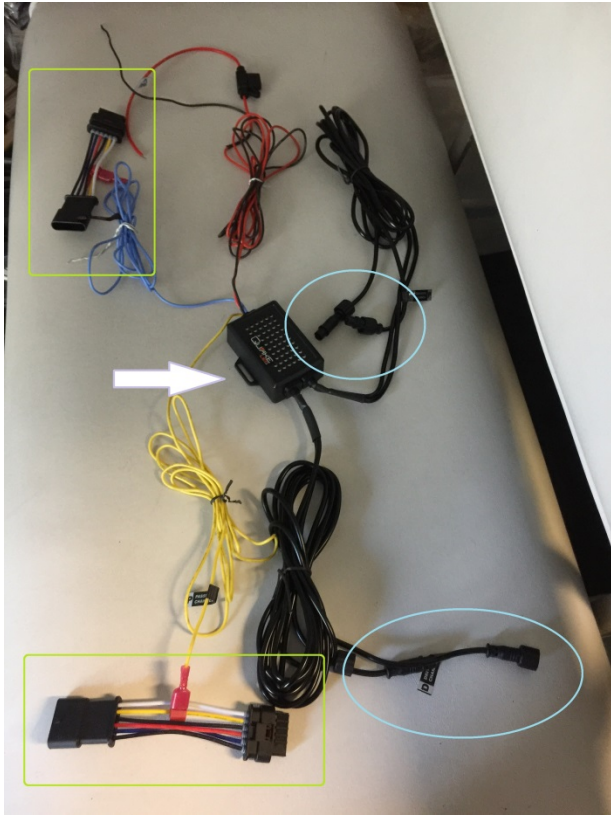

OVERVIEW, ADJUSTMENTS and SETTINGS:

Overview upon opening App

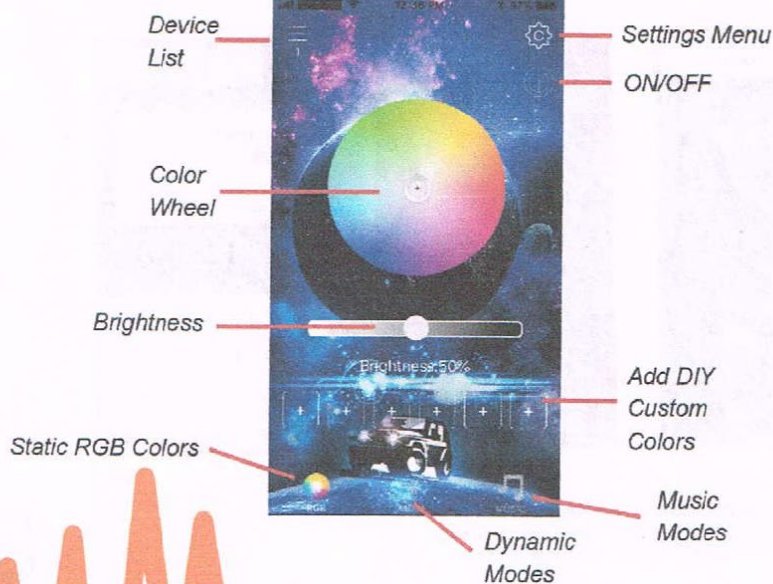

- #1 Turn on Bluetooth
- #2 Open the App.
- #3 Click the Device List tab, located in the upper left corner

