


POWER TOP

REMOVAL

1. Open the top about 30 cm (12 in.).
2. Disconnect and isolate the negative battery cable(s) ([Refer to 08 - Electrical/Battery System/Standard Procedure](#)).
3. Release the catches and remove the side quarter windows.

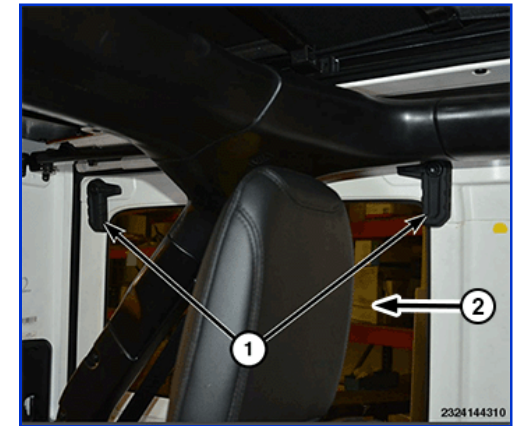


1 - Catches

4. Disconnect the power top wire harness connector.



1 - Wire Harness Connector

5. Remove the nine bolts on each side of the assembly.
 - a. Remove the three screws that secure the side rails to the rear aperture rails.
 - b. Remove the two screws at the front door openings
 - c. Remove the middle four screws.
 - d. Remove the two screws that secure the front of the power top assembly.
6. Mark right front and left front on the top
7. Remove top assembly with the aid of helpers on each side of the assembly.

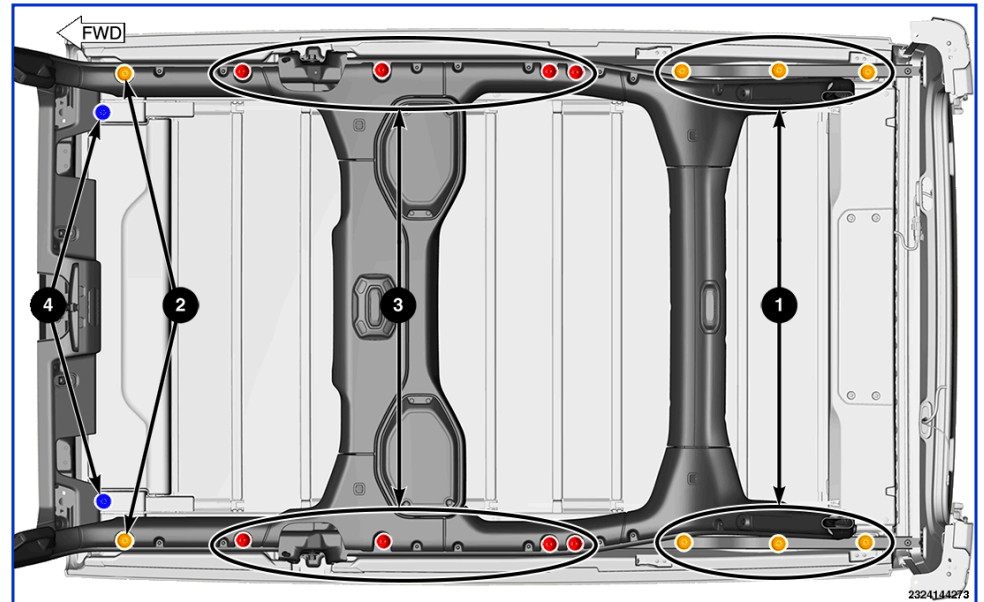


- 1 - Rear Screws 70 mm (2.75 in) Screw Length
- 2 - Front Door Opening Screws 70 mm (2.75 in) Screw Length
- 3 - Middle Screws 103 mm (4 in) Screw Length
- 4 - Front Header Screws 20 mm (0.75 in) Screw Length

INSTALLATION


Follow the removal procedure in reverse for general reassembly of the components on the vehicle. The steps listed below are calling out specific procedures that should be followed during installation.

- Position the top assembly onto the vehicle and fully seated onto the front locating pins followed by the rear locating pins.

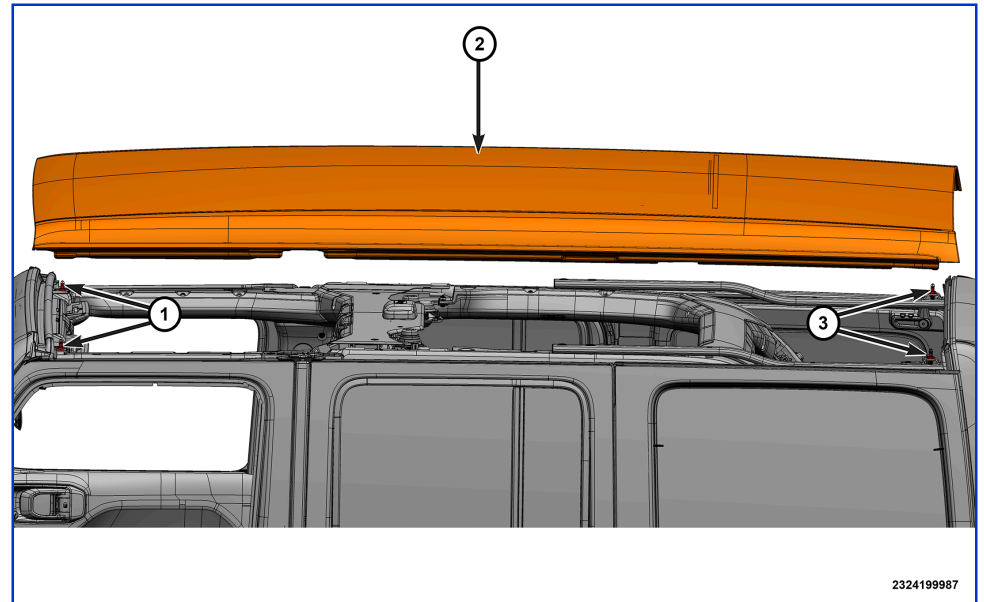

- 1 - Front Locating Pins
- 2 - Power Top Assembly
- 3 - Rear Locating Pins

- The screws that anchor the power top assembly to the frame of the vehicle are different lengths. Damage can occur if a long screw is placed in a short hole. Refer to the illustration for proper screw locations.
- Install the screws as indicated and tighten to the proper ([Torque Specifications](#)) using the sequence shown.
- Calibrate the power top ([Refer to 08 - Electrical/Power Top/Standard Procedure](#)).

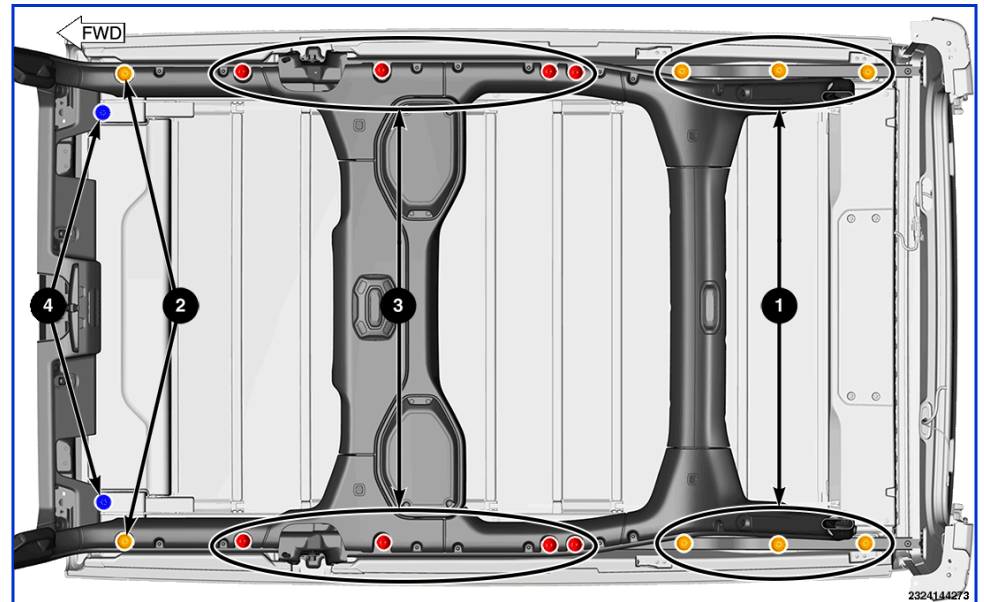

- 1 - Rear Screws 70 mm (2.75 in) Screw Length
- 2 - Front Door Opening Screws 70 mm (2.75 in) Screw Length
- 3 - Middle Screws 103 mm (4 in) Screw Length

4 - Front Header Screws 20 mm (0.75 in) Screw Length