



RockJock® Professional OffRoad Products presents:
CE-9033JLP Towing Bar Mounting Plate (plastic bumper)
Installation Instructions

Fits

- All models of 2018 & up Jeep JL Wrangler equipped with the plastic front bumper.

Kit includes

- (1) CE-9033JLMPP.....Tow Bar Mounting Plate (plastic bumper only)
- (4) CE-2316A624.....3/8" - 16 x 1" flanged head bolt
- (2) CE-9033JLMP-5.....Nut Plate
- (2) CE-9033B.....Tow Bar Mounting Fork
- (2) CE-9033CP2.....Clevis Pin
- (2) CE-9033H.....Hairpin Clip

Required Tools

- 8mm socket
- 16mm wrench/socket
- 9/16" wrench/socket
- Torque wrench
- 13mm wrench/socket
- 18mm socket
- Flat screwdriver
- Mallet

Torque Specs.

- Black nuts that hold tow plate to back of bumper.....25 ft. lbs.
- Bumper to frame nuts.....65 ft. lbs.
- 3/8" bolts for nut plates.....45 ft. lbs.

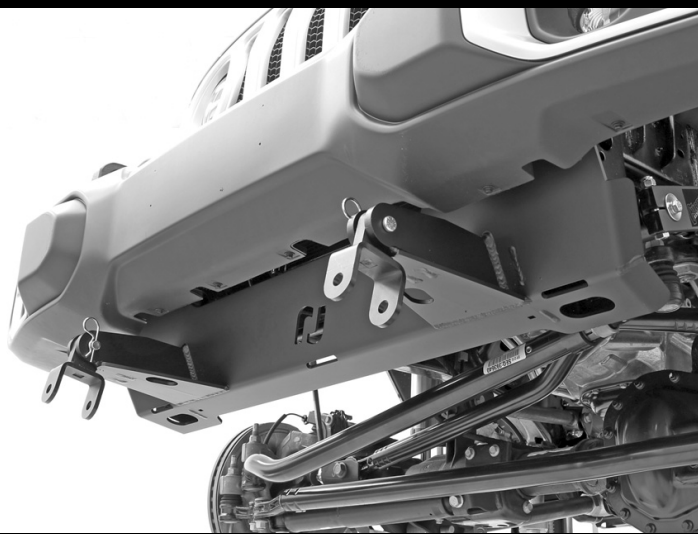


Plate Instructions

***** Notes: Use blue loctite on all hardware that you install. *****

- 1) With an 8mm socket, remove the 2 screws from the bottom of the stock plastic chin panel. (Fig. 1)
- 2) Remove all 8 of the 18mm bumper attaching nuts. (Fig. 2) Retain the nuts for reuse.
- 3) With a flat head screwdriver, pop the 2 rivets out that attach the plastic splash apron to the tops of the frame horns. (Fig. 3) Retain rivets for reuse.
- 4) Unplug the fog light wiring harness that can be found on the passenger's side of the vehicle. (Fig. 4)
- 5) Remove the entire bumper and chin panel assembly. (Fig. 5)
- 6) With a flat head screwdriver, remove all of the plastic rivets that attach the plastic chin panel to the bumper and separate them. (Fig. 6&7)
- 8) Trim the metal lip on the bottom edge of the bumper to clear the new Currie plate. Test fitting of the plate will probably be required. (Fig. 8)
- 9) You can see the amount of trimming done (on both sides) of the sheetmetal panel on our unit. (Fig. 9)
- 7) Inside the back of the bumper, remove the 4 black nuts with a 13mm wrench or socket. (Fig. 10) Retain the nuts for reuse.
- 10) Drop the Currie plate into place over all of the studs. (Fig. 11)
- 11) Reinstall the 4 black nuts and tighten. (Fig. 12)
- 12) Remove the 2 sheetmetal panel attaching bolts with a 15mm wrench or socket. (Fig. 13)
- 13) Remove the panel. (Fig 14)
- 14) Reinstall the bumper and Currie tow plate assembly. (Fig. 15)
- 15) Install, but do not tighten the 8 bumper attaching bolts. (Fig. 16)
- 16) Insert the supplied nut plates thru the large holes in the bottom of the tow plate and slide them up into the frame horn. (Fig. 17)
- 17) Install and torque the 4 supplied 3/8" bolts into the nut plates, then go back and torque the 8 bumper attaching bolts. (Fig. 18)
- 18) Reinstall the plastic rivets on the tops of the frame rails. (Fig. 19)
- 19) Reconnect the fog light harness. (Fig. 20)
- 20) The tow bar fork brackets simply install with the supplied clevis pins and hairpin clips. (Fig. 21)



Currie Enterprises / RockJock Professional Off Road Products
 382 N. Smith Ave., Corona, Ca. 92880
 Ph (714) 528-6957 - F (951) 549-0267
 www.currieenterprises.com





Fig. 1

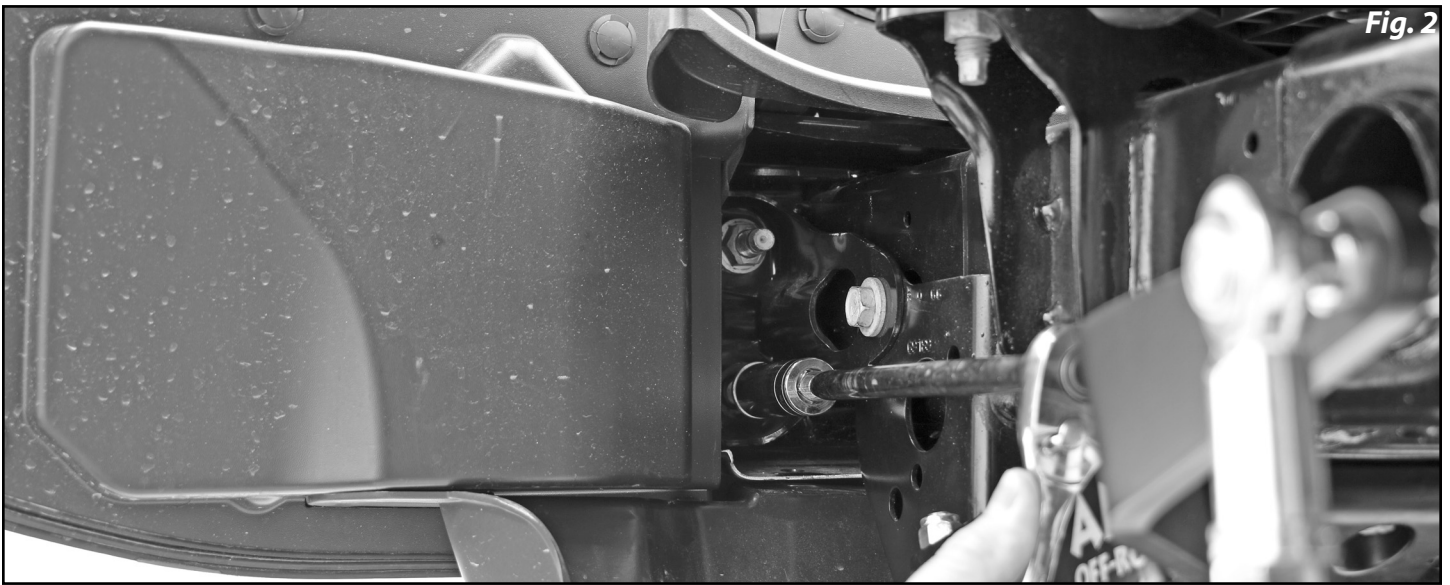


Fig. 2

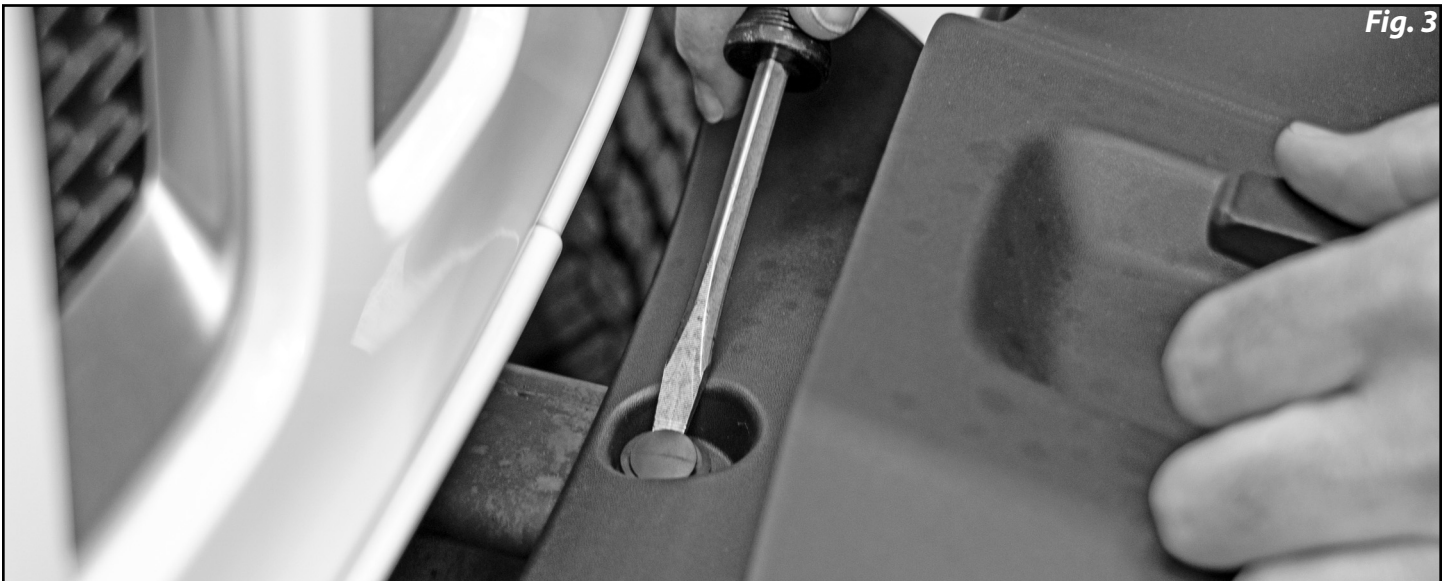


Fig. 3



Currie Enterprises / RockJock Professional Off Road Products
382 N. Smith Ave., Corona, Ca. 92880
Ph (714) 528-6957 - F (951) 549-0267
www.currieenterprises.com





Fig. 4



Fig. 5

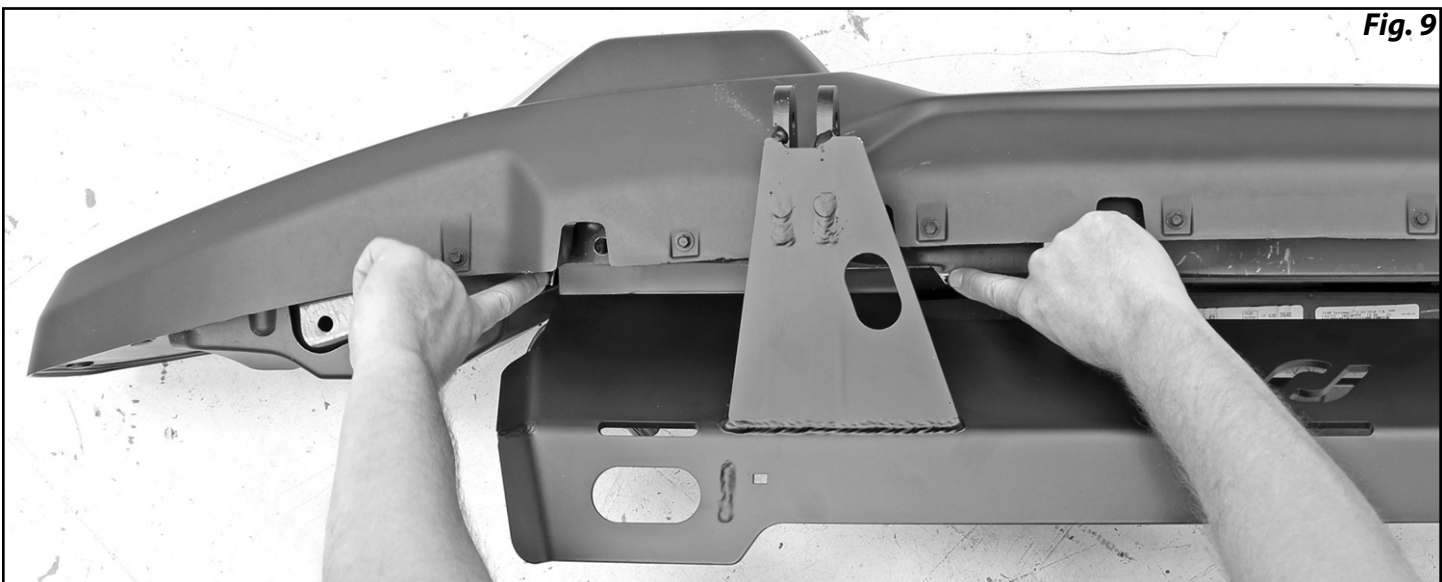


Fig. 6



Currie Enterprises / RockJock Professional Off Road Products
382 N. Smith Ave., Corona, Ca. 92880
Ph (714) 528-6957 - F (951) 549-0267
www.currieenterprises.com





Currie Enterprises / RockJock Professional Off Road Products
382 N. Smith Ave., Corona, Ca. 92880
Ph (714) 528-6957 - F (951) 549-0267
www.currieenterprises.com



Fig. 10


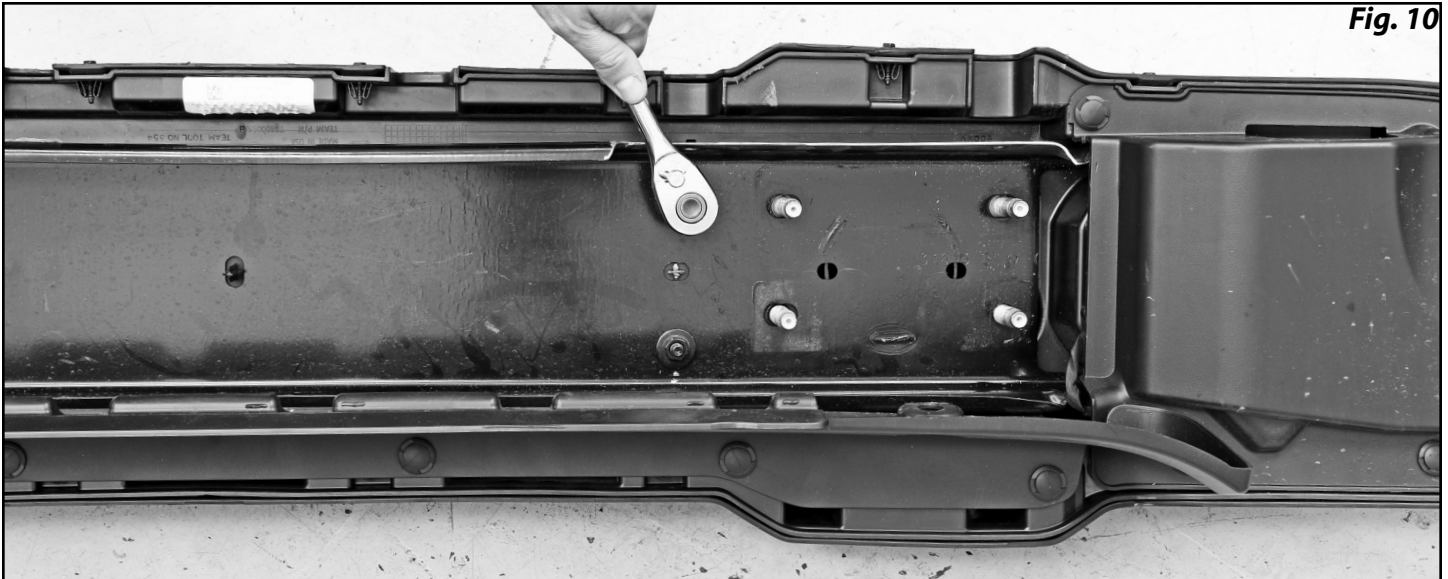


Fig. 11



Fig. 12

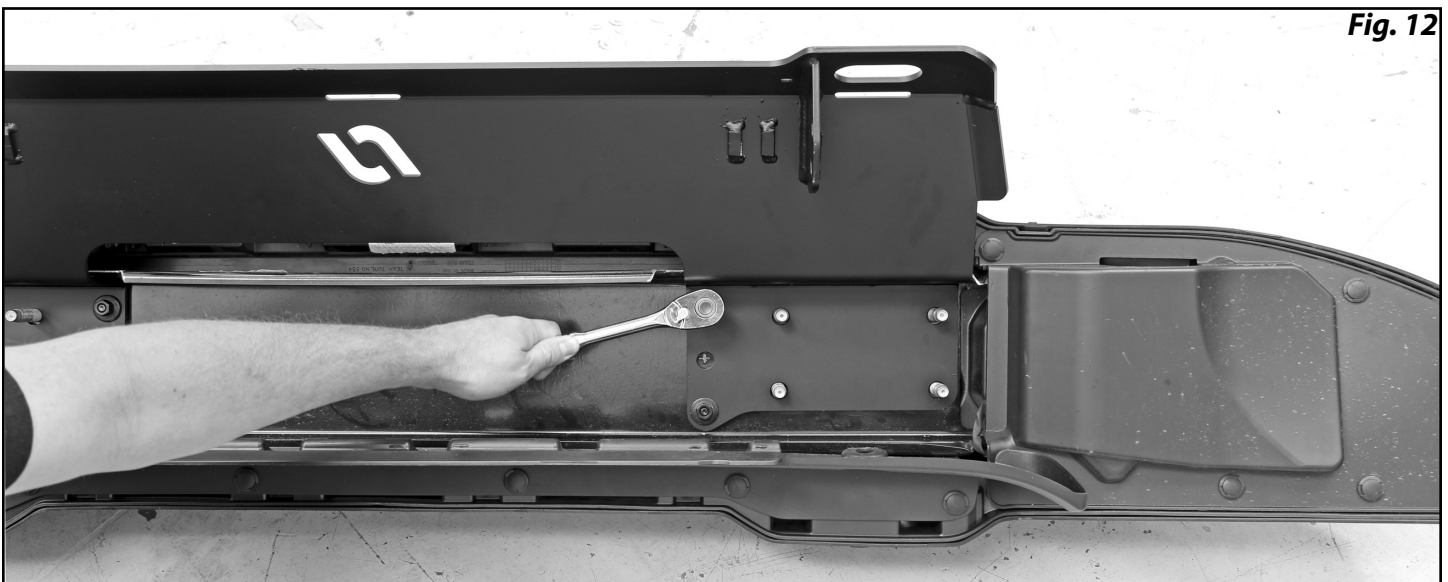

Currie Enterprises / RockJock Professional Off Road Products
382 N. Smith Ave., Corona, Ca. 92880
Ph (714) 528-6957 - F (951) 549-0267
www.currieenterprises.com





Fig. 13



Fig. 14



Fig. 15



Currie Enterprises / RockJock Professional Off Road Products
382 N. Smith Ave., Corona, Ca. 92880
Ph (714) 528-6957 - F (951) 549-0267
www.currieenterprises.com



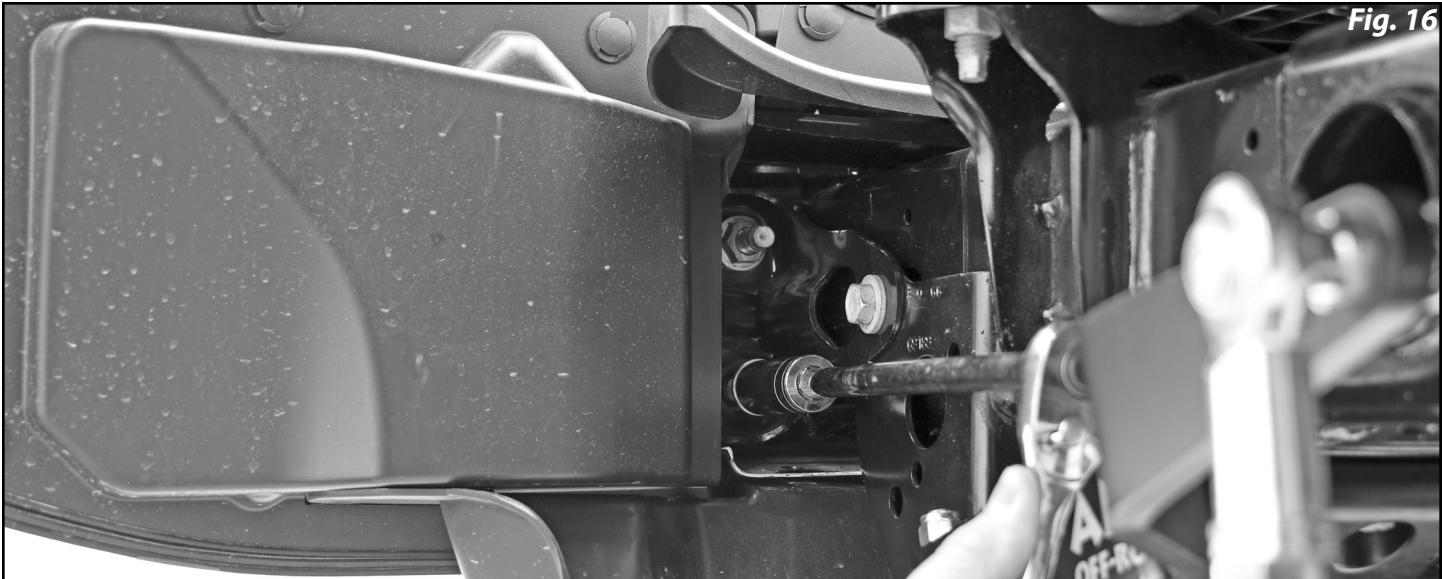


Fig. 16



Fig. 17



Fig. 18



Currie Enterprises / RockJock Professional Off Road Products
382 N. Smith Ave., Corona, Ca. 92880
Ph (714) 528-6957 - F (951) 549-0267
www.currieenterprises.com



Fig. 19

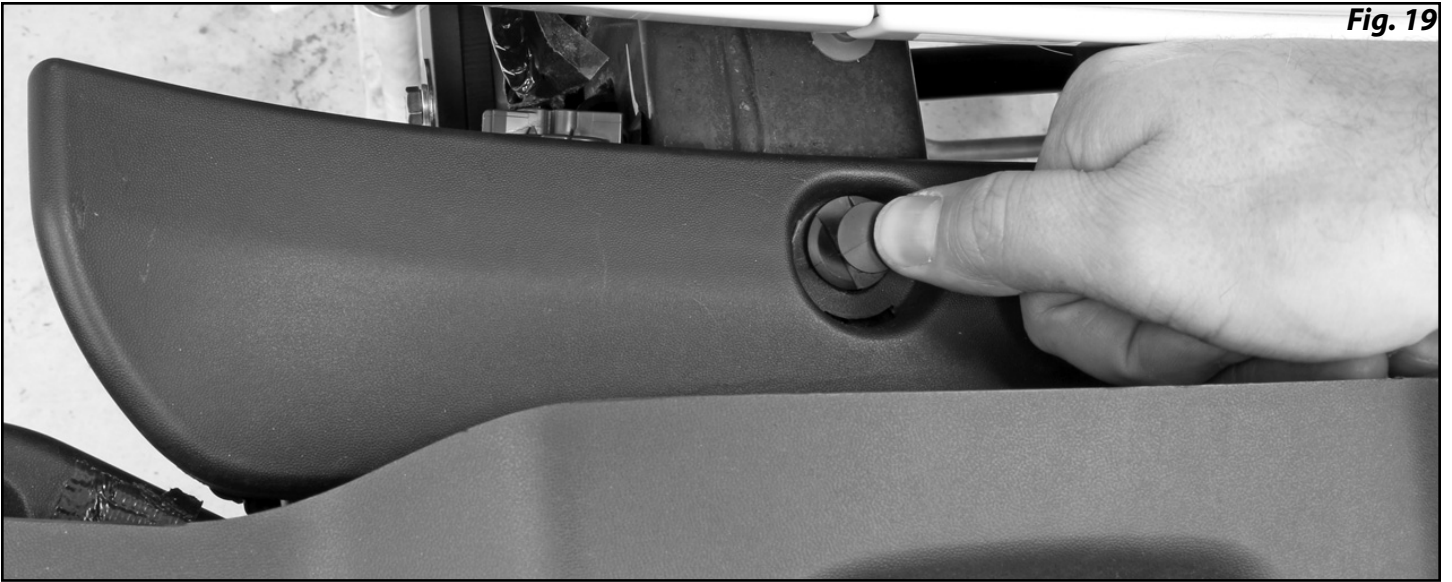


Fig. 20

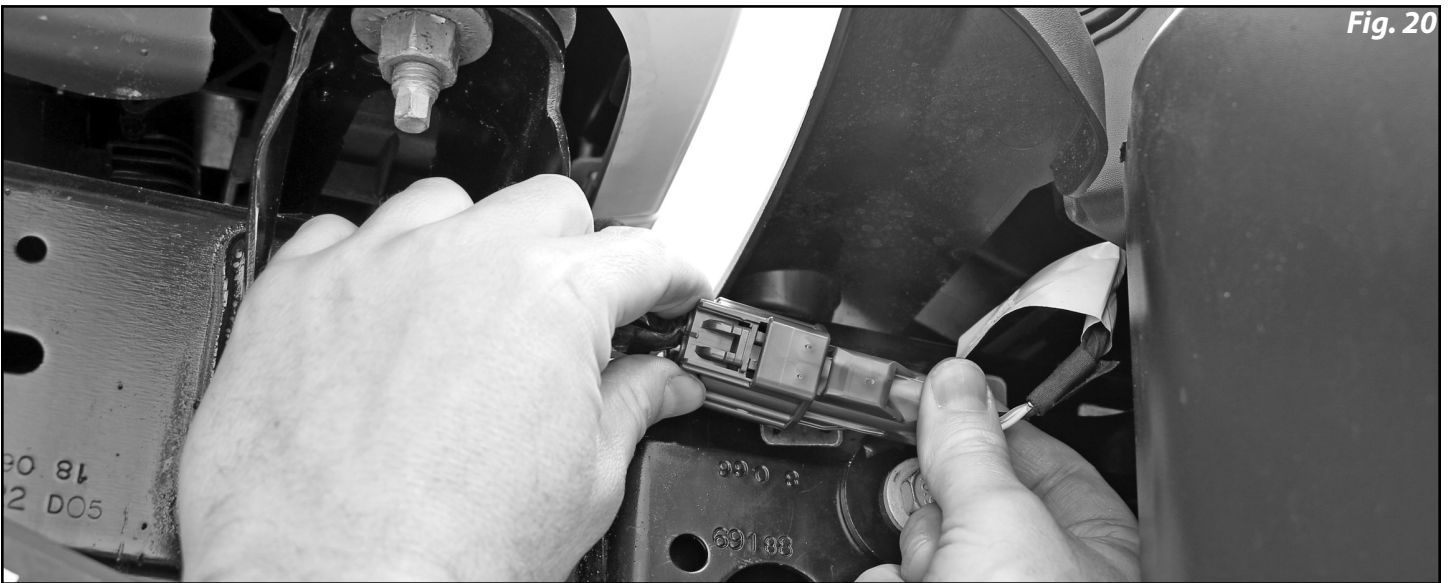


Fig. 21



Currie Enterprises / RockJock Professional Off Road Products
382 N. Smith Ave., Corona, Ca. 92880
Ph (714) 528-6957 - F (951) 549-0267
www.currieenterprises.com





Completed Installation.

Tow Bar Instructions

- 1) The Currie tow bar end forks fit most common brands of tow bars (Freidl, DrawTite, Blue Ox, etc.). Remove the vehicle end tow bar brackets from your tow bar of choice and install the Currie tow bar end forks onto the tow bar. (Fig. 1)
- 2) Insert the tongues of the tow bar forks into the forks on the tow bar plate, slide the clevis pins thru and insert the hairpin clips. (Fig. 2)
- 3) Strictly adhere to the recommendations in the tow bar's instruction sheet as to proper installation of safety chains or cables. (Fig. 3)

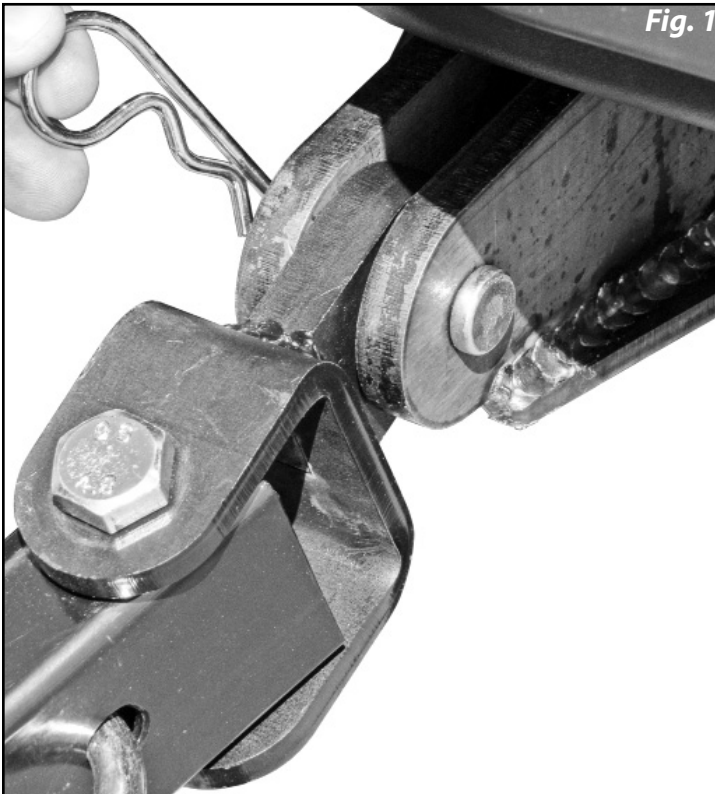


Fig. 1



Fig. 2



Fig. 3



Currie Enterprises / RockJock Professional Off Road Products
382 N. Smith Ave., Corona, Ca. 92880
Ph (714) 528-6957 - F (951) 549-0267
www.currieenterprises.com









Currie Enterprises / RockJock Professional Off Road Products
382 N. Smith Ave., Corona, Ca. 92880
Ph (714) 528-6957 - F (951) 549-0267
www.currieenterprises.com

