

JL Wrangler Front Camera Wiring Instructions

Overview

The AV Cable kit plus Tazer JL is the perfect combination to give yourself an additional camera input. The camera input can be used for whatever you wish, but the most common uses are a front mounted camera to aid in parking or a low mounted camera to help rock crawling / off-roading.

Installation

First, using a trim stick insert it below the start button to begin the remove of the trim piece. Work your way around the panel to all of the clips are released.



Once the panel is removed, you will gain access to the radio bezel. Using a Phillips screwdriver, remove the two bottom screws from the bezel.




Using your Trim Stick, Remove the bezel making note to not pry too hard.




Using a Philips head screwdriver, remove the 4 screws around the perimeter of the radio




Carefully pull the radio towards you and release all of the connectors on the back of the radio.

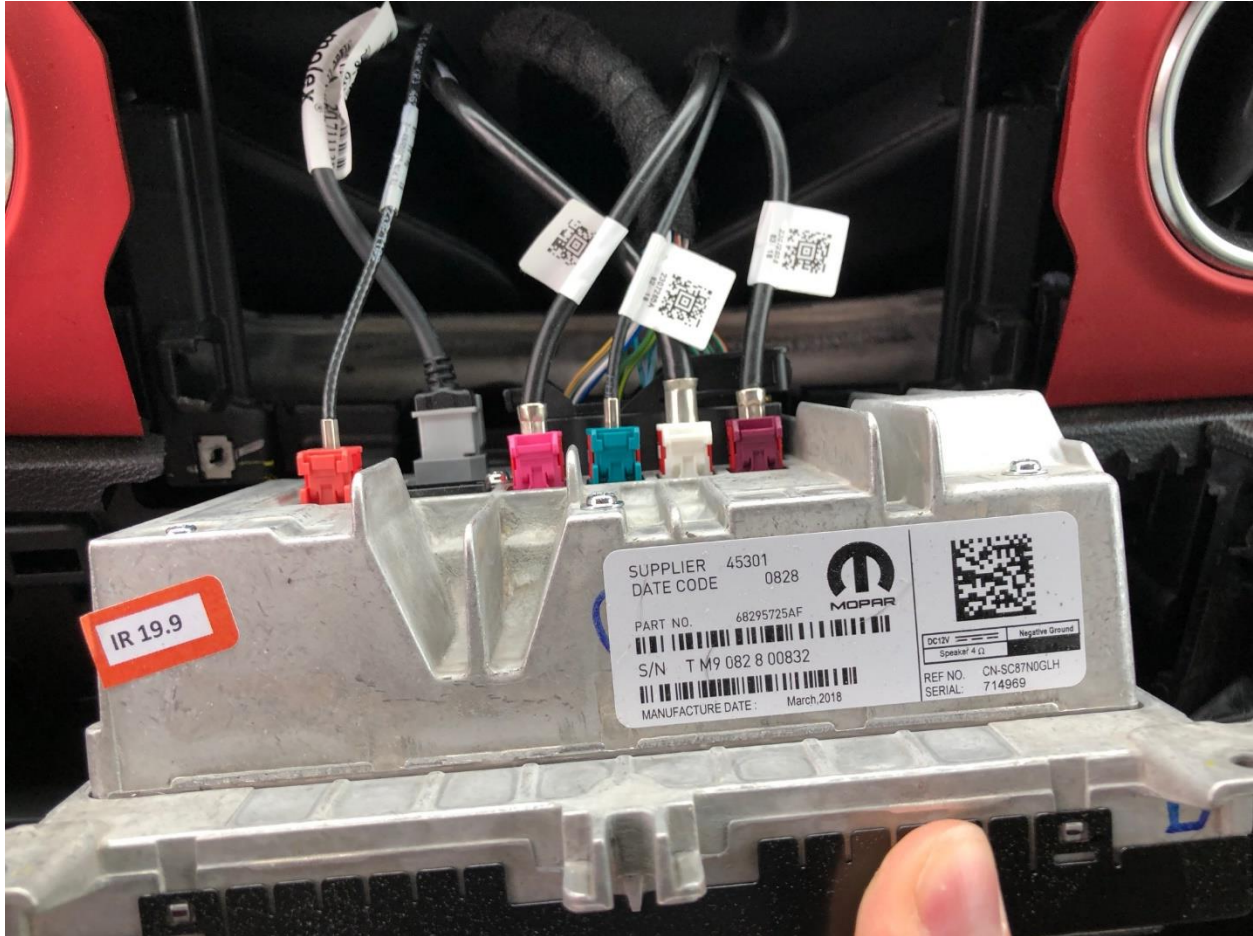


Using a small flat head screwdriver, remove the red Terminal lock off of the 52 pin radio connector.

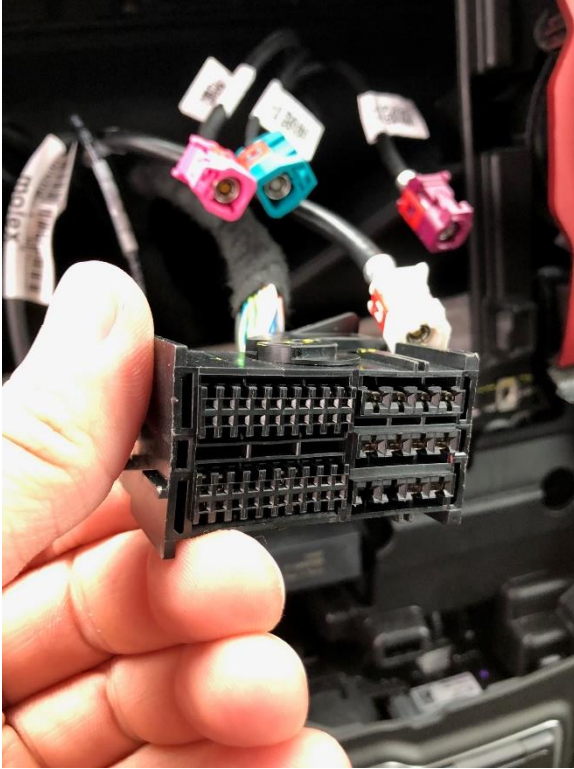

With the terminal lock removed, Pin the **Yellow Wire into pin 24, and the black wire into pin 25.**

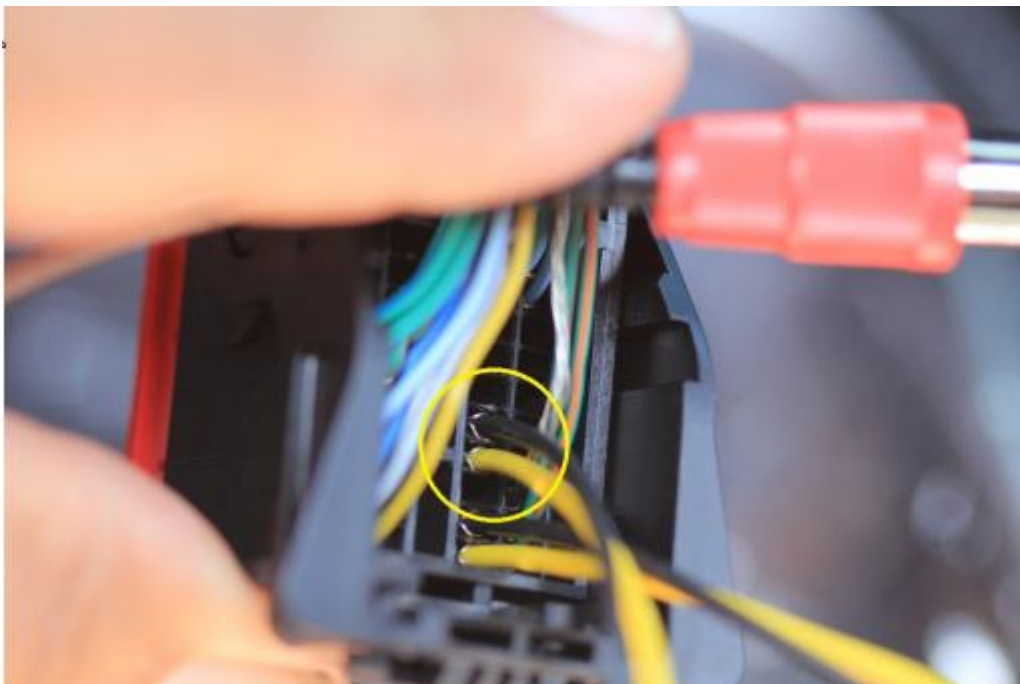

Reinstall the red Terminal Protector once the pins are inserted into the connector.

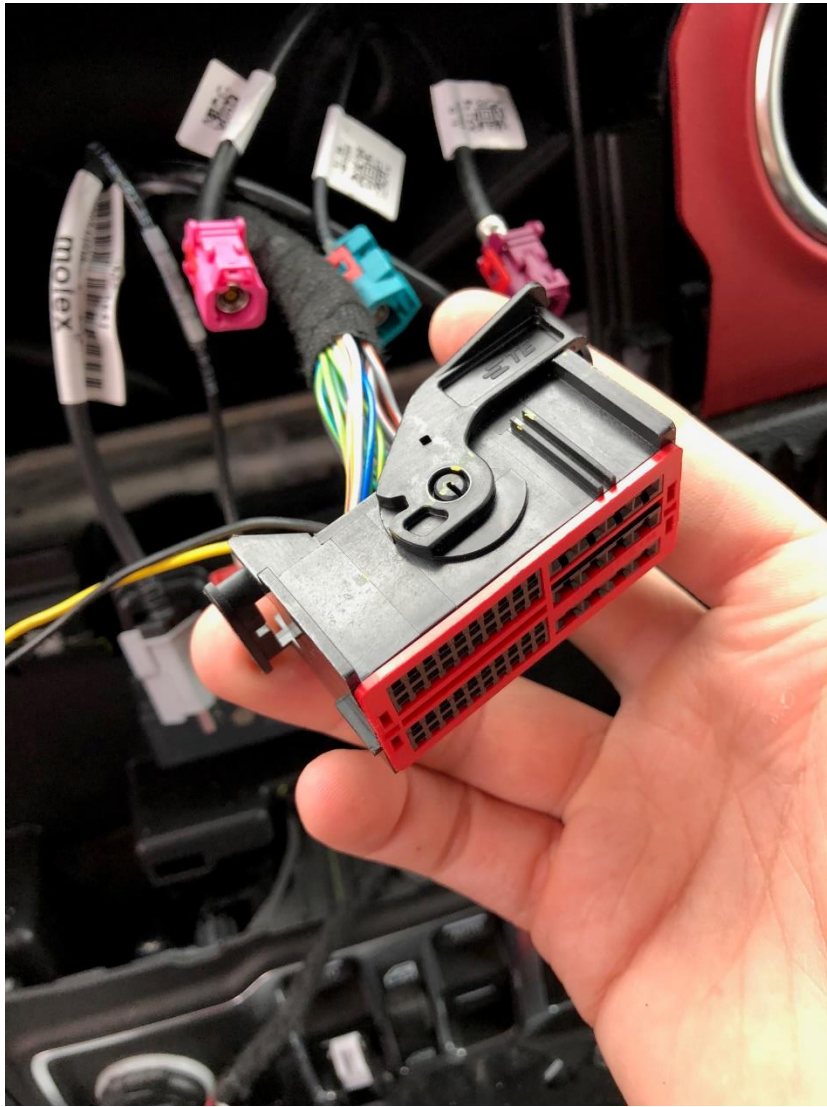

Reinstall radio making sure to reconnect all factory connectors, and reinstall radio bezel and dash piece.

For vehicles equipped with an automatic transmission, the clutch pass through in the firewall is a great location to run your camera wiring through. From the engine bay, reach down below the master cylinder and counter clockwise unscrew the plug. Its recommended to drill through the center of the cap and use a grommet to keep the wiring secure.





Please be aware that modifying your vehicle in any way can affect your vehicle's warranty, longevity. Please use with caution, and AT YOUR OWN RISK.